

Normal maintenance schedule [for Europe (except Russia)]

The following maintenance services must be performed to ensure good emission control and performance. Keep receipts for all vehicle emission services to protect your warranty. Where both mileage and time are shown, the frequency of service is determined by whichever occurs first.

MAINTENANCE INTERVALS	Normal Maintenance Schedule [For Europe (Except Russia)]								
	Number of months or driving distance, whichever comes first								
	Months	12	24	36	48	60	72	84	96
	Miles×1,000	10	20	30	40	50	60	70	80
	Km×1,000	15	30	45	60	75	90	105	120
MAINTENANCE ITEM									
Coolant * ¹		Replace every 60,000 km (40,000 miles) or 36 months							
Reduction gear oil		-	-	-		-	-	-	
Drive shafts and boots		-		-		-		-	
Cooling system		At first, Inspect 60,000 km (40,000 miles) or 48 months after that, Inspect every 30,000 km (20,000 miles) or 24 months							
Air conditioner refrigerant/compressor (if equipped)									
Climate control air filter		-	R	-	R	-	R	-	R
Disc brakes and pads									
Brake lines, hoses and connections									
Brake pedal		-		-		-		-	

*¹ When the coolant level is low, have the reservoir filled by an authorized Kia dealer by using only designated coolant water for electric vehicles. Using other types of water or antifreeze can cause serious damage to the vehicle.

MAINTENANCE INTERVALS	Normal Maintenance Schedule [For Europe (Except Russia)]								
	Number of months or driving distance, whichever comes first								
	Months	12	24	36	48	60	72	84	96
	Miles×1,000	10	20	30	40	50	60	70	80
Km×1,000		15	30	45	60	75	90	105	120
MAINTENANCE ITEM									
Brake fluid		I	R	I	R	I	R	I	R
Steering gear rack, linkage and boots		I	I	I	I	I	I	I	I
Suspension ball joints		I	I	I	I	I	I	I	I
Tire (pressure & tread wear)		I	I	I	I	I	I	I	I
12V Battery condition		I	I	I	I	I	I	I	I

*¹ When the coolant level is low, have the reservoir filled by an authorized Kia dealer by using only designated coolant water for electric vehicles. Using other types of water or antifreeze can cause serious damage to the vehicle.

- R: Replace
- I: Inspect and if necessary, adjust, correct, clean or replace