

- [Niro Manuals](#)
- [OM](#)
- [SM](#)
- [New](#)
- [Top](#)
- [Sitemap](#)
- [Search](#)



Kia Niro: Rear Bumper / Rear Bumper Cover Repair procedures

[Kia Niro 2017 \(DE HEV\) Service Manual](#) / [Body \(Interior and Exterior\)](#) / [Rear Bumper](#) / Rear Bumper Cover Repair procedures

Replacement

CAUTION

Put on gloves to protect your hands.

Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Be careful not to bend or scratch the trim and panels.


1. Remove the combination lamp cover (A).



2. Remove the rear combination lamp (A) after loosening the mounting screws.



3. Remove the waterproof seal (A).

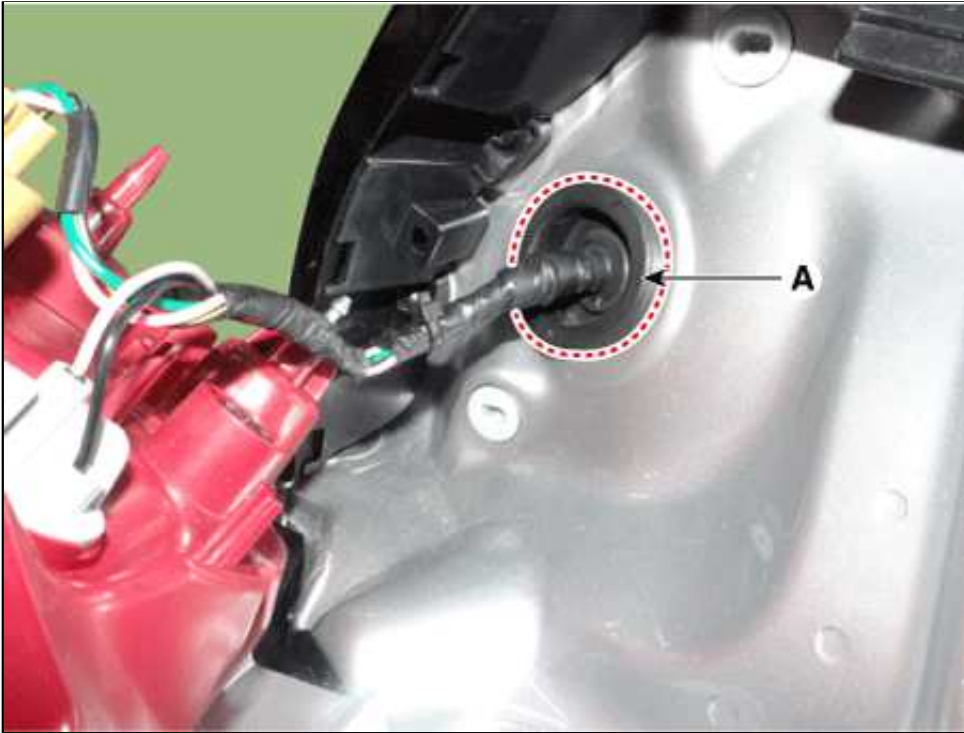


4. Disconnect the rear combination lamp connector (A).



5. Loosen the rear bumper upper mounting fastener.



6. Remove the rear bumper side after loosening the screw and fastener.

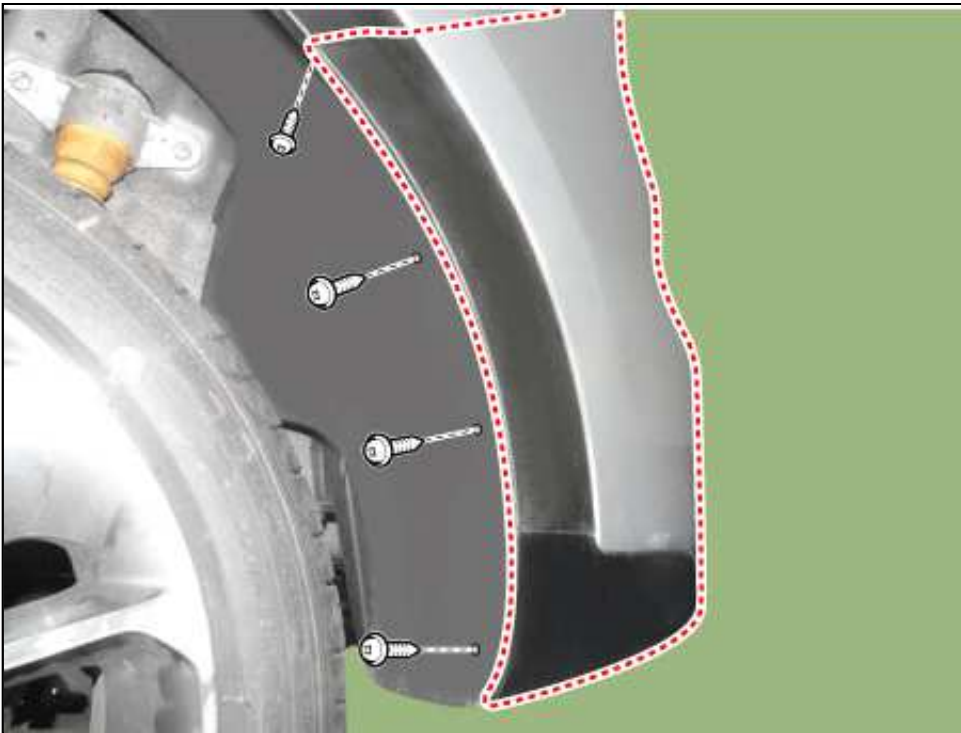


7. Remove the wheel guard mounting clip (A).




8. Remove the rear bumper side under cover (A).

[LH]

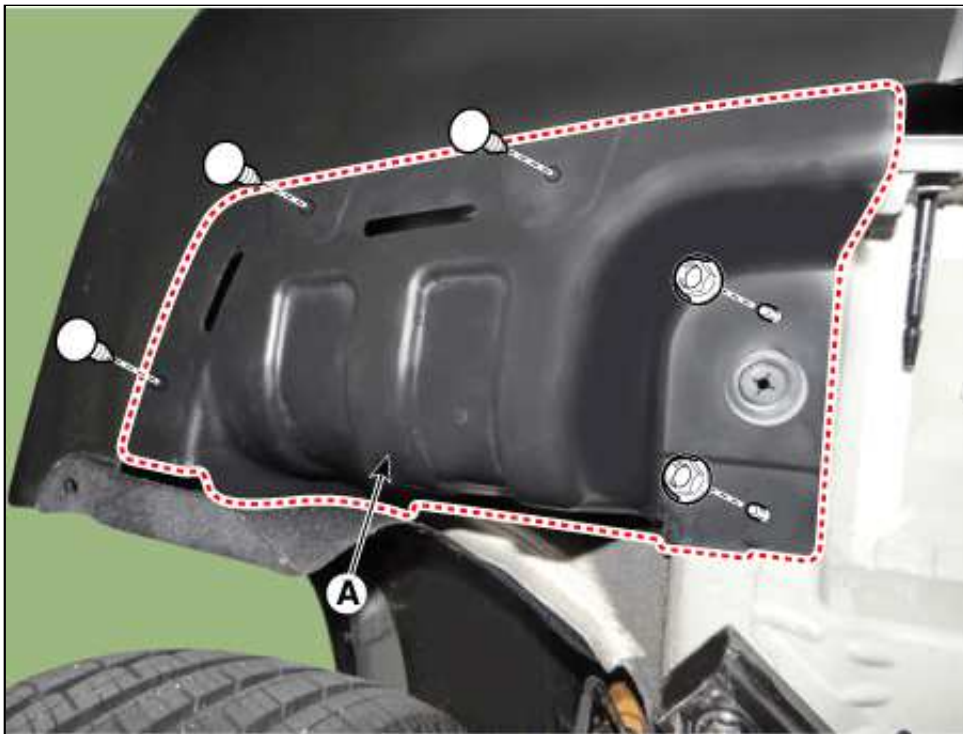


[RH]

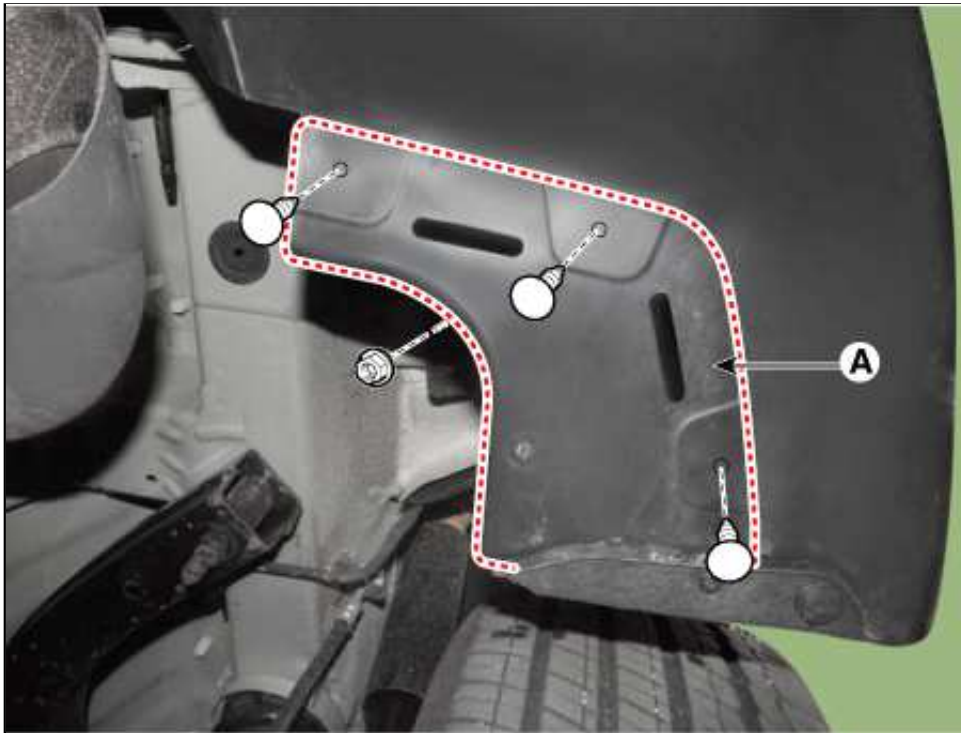


9.
Loosen the mounting bolts.



10.
Disconnect the rear bumper main connector (A).

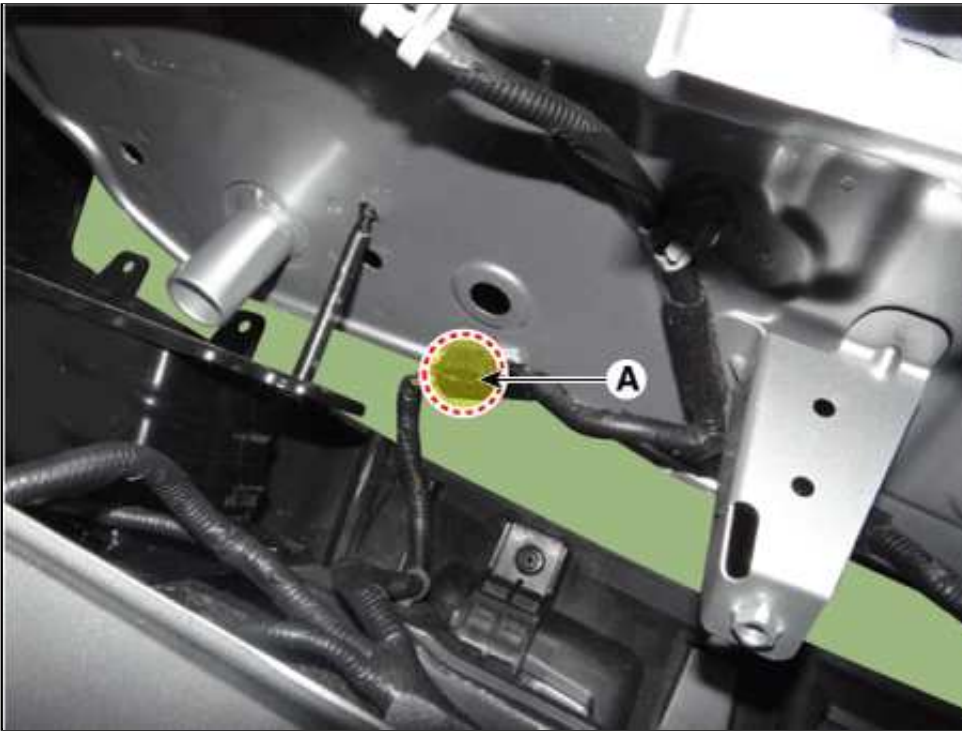

11. Remove the rear bumper cover (A).

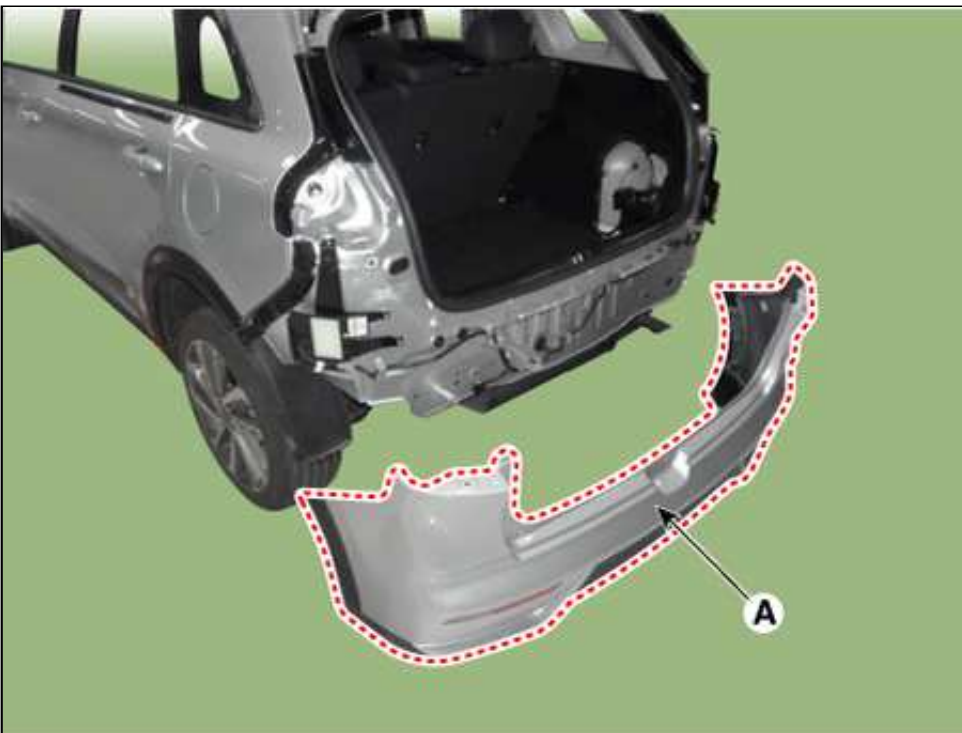

12. Install in the reverse order of removal.

i Information

- Make sure the connector is connected properly.
- Replace any damaged clips.

**Rear Bumper Cover Components and components location**

Component Location 1. Rear bumper cover ...

**Rear Bumper beam Assembly Components and components location**

Component Location 1. Rear bumper beam assembly ...

Other information:[Kia Niro \(DE HEV\) Owners Manual: Climate control air filter](#)

Filter inspection The climate control air filter should be replaced according to the maintenance schedule. If the vehicle is operated in severely air-polluted cities or on dusty rough roads for a long period, it should be inspected more frequently and replaced earlier. When you replace the cl ...

[Kia Niro \(DE HEV\) Owners Manual: Disarmed stage](#)

The system will be disarmed when: Folding key - The door unlock button is pressed. - The engine is started. (within 3 seconds) - The ignition switch is in the "ON" position for 30 seconds or more. Smart key - The door unlock button is pressed. - The button of the front outside door is pre ...

© 2016-2017 www.kniro.net

