

- [Niro Manuals](#)
- [OM](#)
- [SM](#)
- [New](#)
- [Top](#)
- [Sitemap](#)
- [Search](#)



Kia Niro: Lighting System / Rear Combination Lamp Repair procedures

[Kia Niro 2017 \(DE HEV\) Service Manual](#) / [Body Electrical System](#) / [Lighting System](#) / Rear Combination Lamp Repair procedures

Removal

Rear Combination Lamp (Outside)


1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, remove the rear combination lamp cover (A).



3. Remove the rear combination lamp (A) after loosening the screws.



4. Remove the rear combination lamp packing (A).

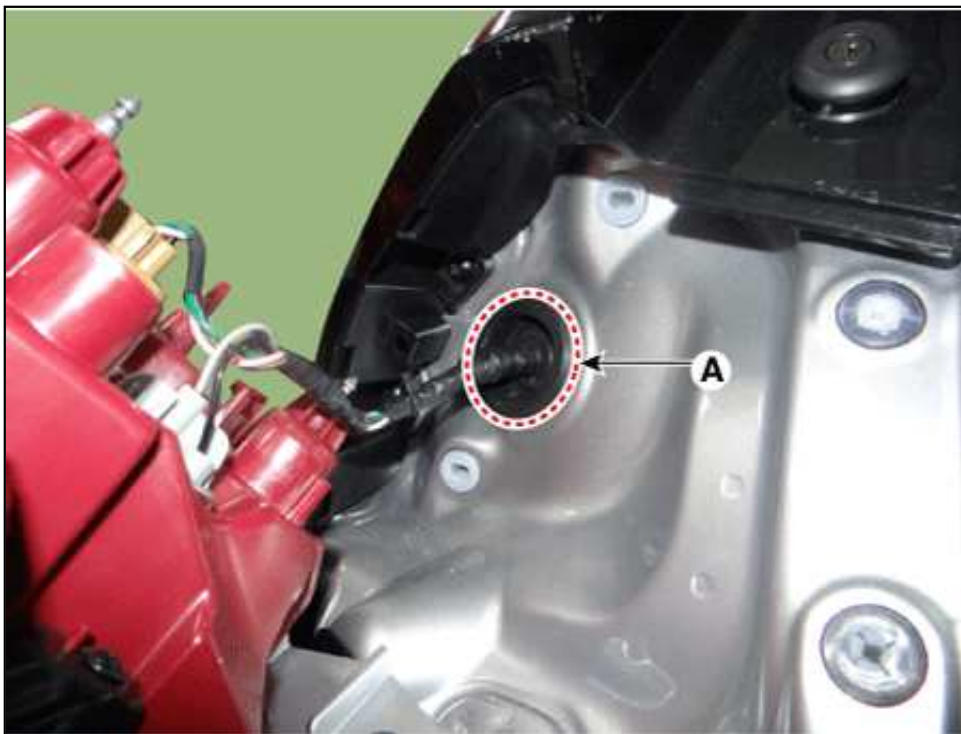


5. Disconnect the rear combination lamp connector (A).



Rear Combination Lamp (Inside)

1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, remove the rear combination lamp cover (A).

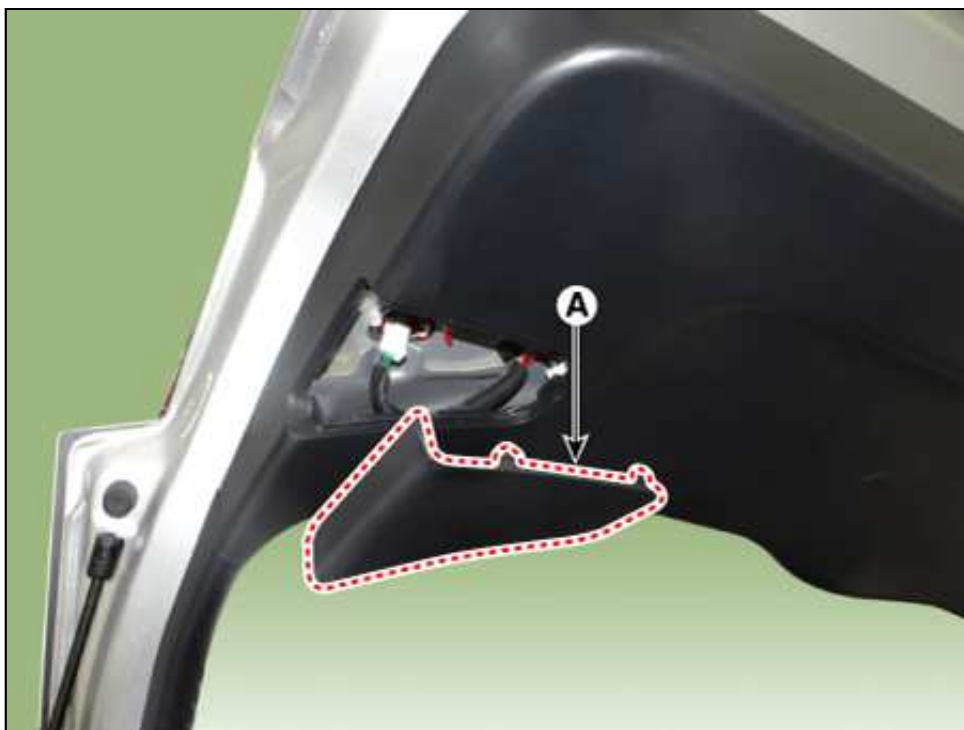

3. Disconnect the connector (B) and then remove the rear combination lamp (A) after loosening the nuts.



Back up lamp

1. Disconnect the negative (-) battery terminal.
2. Remove the rear bumper cover.
(Refer to Body - "Rear bumper Cover")
3. Disconnect the back up lamp connector (A).




4. Remove the back up lamp (A) after loosening the screws.



Bulb Replacement

Back Up Lamp

1. Disconnect the negative (-) battery terminal.
2. Remove the back up lamp bulb (B) by turning the socket (A) counterclockwise.

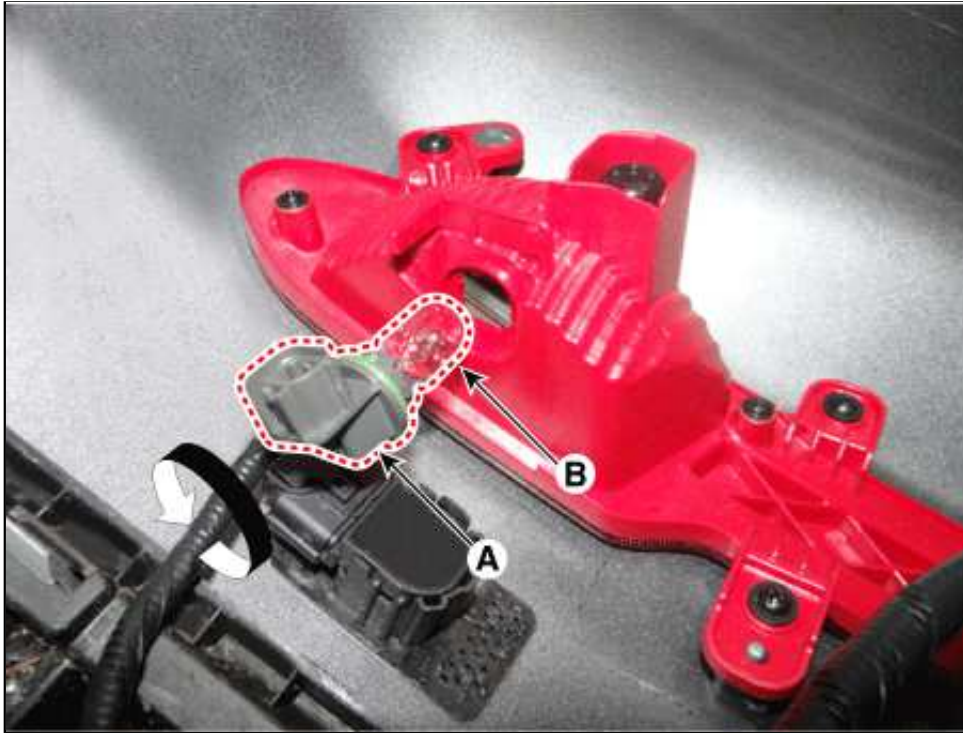

Installation

Rear Combination Lamp (Outside)

1. Connect the rear combination lamp connector.
2. Install the rear combination lamp.
3. Install the rear combination lamp cover.
4. Connect the negative (-) battery terminal.

Rear Combination Lamp (Inside)

1. Install the rear combination lamp.
2. Connect the rear combination lamp connector.
3. Install the rear combination lamp cover.
4. Connect the negative (-) battery terminal.

Back Up Lamp

- 1.

Install the back up lamp.

2. Install the rear bumper cover.
3. Connect the negative (-) battery terminal.



High Mounted Stop Lamp Repair procedures

Multifunction Switch



Removal 1. Disconnect the negative (-) battery terminal. 2. Remove the rear spoiler. (Refer to Body - "Rear Spoiler") ...

Other information:

[Kia Niro \(DE HEV\) Owners Manual: VSM operation](#)

When the VSM is operating: ESC (Electronic Stability Control) () light will blink. The steering wheel may be controlled. When the vehicle stability management is operating properly, you can feel a slight pulsation in the vehicle. This is only the effect of brake control and indicates ...

[Kia Niro 2017 \(DE HEV\) Service Manual: General safety information and caution](#)

Safety Precaution Precautions to take before servicing high voltage system Since hybrid vehicles contain a high voltage battery, if the high voltage system o ...

© 2016-2017 www.kniro.net

