


Inspection



To inspect and diagnose the sensor, refer to Self-Diagnosis procedure and DTC guide.

Replacement


1. Disconnect the negative (-) battery terminal.
2. Remove the ECM mirror cover (A).

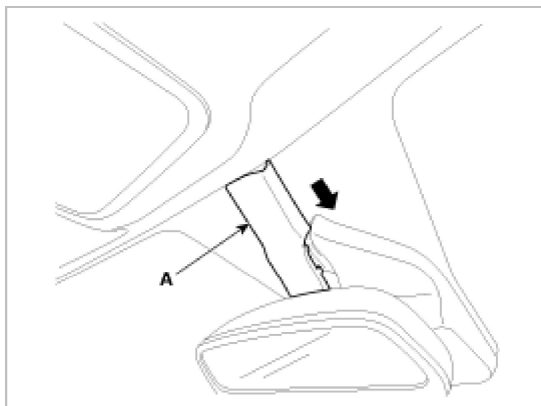

3. Push the ECM mirror base up to remove the auto defog sensor & rain sensor cover (A).

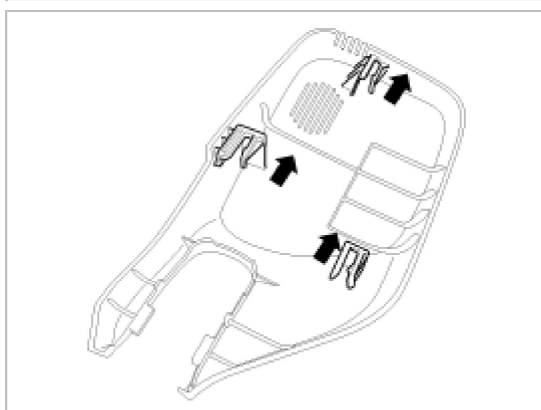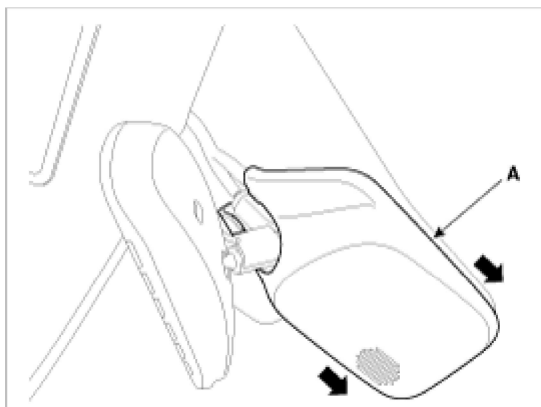

4. Disconnect the connector (A) and then remove the auto defogging sensor (B).

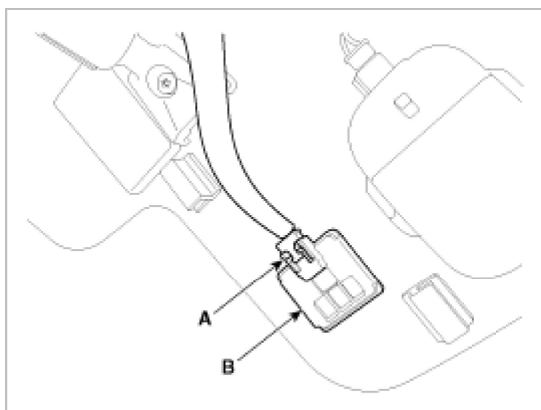

5. Install in the reverse order of removal.